


# Edge 100 W/C Composite Wood Garden Edging

Length 2900mm | Width 16mm | High 100mm




#### **Accessories**

Straight Joiner

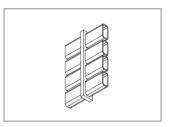

**Corner Joiner** 

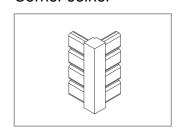

Fixing Spike




Spike Guide





# Installation Guide **Eco Edge 100**

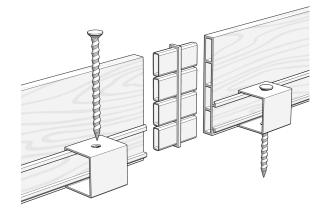

# **Site Preparation**

Hedge can be placed directly onto soil, road base, sand, concrete surfaces & slabs. Site prep required is at the discretion of the installer dependent on above or below ground use.

# **Joining**

Simply insert Hedge custom made straight joiners into the edging profile for a seamless, uninterrupted garden edge.

#### Cutting

For best results, cut garden edging using an electric drop saw. \*Metal cutting blade not required.

# **Fixings**


#### **Corners**

Achieving the perfect right angle is easy with Hedge custom made corner joiners. No additional screws or fixings are required.


#### **Curves**

Bend WC edge to the desired shape to create sweeping curves easily.


Step 1 - Join

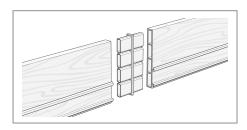


Step 2 - Connect

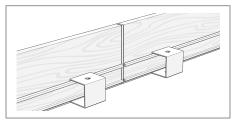


Step 3 - Corners



Step 4 - Install

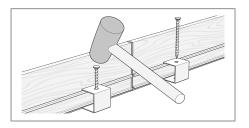

Step 5 – Curves



Step 6 - Backfill

